



**QUALITY ~ PERFORMANCE ~ INNOVATION**

Recommendations for X-Back MOLLE Constant  
Wear Life Vest  
Accessories Placement



QUALITY ~ PERFORMANCE ~ INNOVATION

Please note that the following pages represent recommendations for the placement of accessories on Switlik life vests. This document is intended to be a guide only. Operators should consider best practices, and check with their local Airworthiness Authority for guidance on regulatory compliance.



QUALITY ~ PERFORMANCE ~ INNOVATION


Begin by laying the X-Back MOLLE life vest on a table, with the MOLLE panels flat and extended. The bottom of the vest should be closest to you, as shown.






QUALITY ~ PERFORMANCE ~ INNOVATION

For orientation purposes, we will refer to the left and right hand sides of the vest from the perspective of the person attaching the accessories.

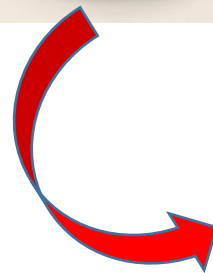

Left Side

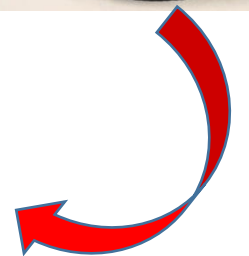

Right Side



QUALITY ~ PERFORMANCE ~ INNOVATION

The female Leg Strap buckle can be affixed to the first MOLLE loop to the immediate right and left of the main vest buckle, as shown.





QUALITY ~ PERFORMANCE ~ INNOVATION

The male Leg Strap buckle can be affixed to the bottom two MOLLE loops, one column in from the outside of the vest, as shown.





QUALITY ~ PERFORMANCE ~ INNOVATION

The All-In-One Pocket installs on the left side of the vest. Three snap attachments will feed through the middle MOLLE loop row, at the points indicated. The bottom two pocket snap attachments are installed on the MOLLE loops on either side of the installed male Leg Strap end.





QUALITY ~ PERFORMANCE ~ INNOVATION

When the All-In-One Pocket is installed, the pocket will cover a portion of the Leg Strap. The Leg Strap can still be deployed by grabbing the tailing end and pulling firmly.







QUALITY ~ PERFORMANCE ~ INNOVATION


Install the Angle Mount Aqua Lung LV2 Holster by passing the snap attachments through the indicated MOLLE Loops.





QUALITY ~ PERFORMANCE ~ INNOVATION

When the LV2 Holster is installed, the pocket will cover a portion of the Leg Strap. The Leg Strap can still be deployed by grabbing the tailing end and pulling firmly.

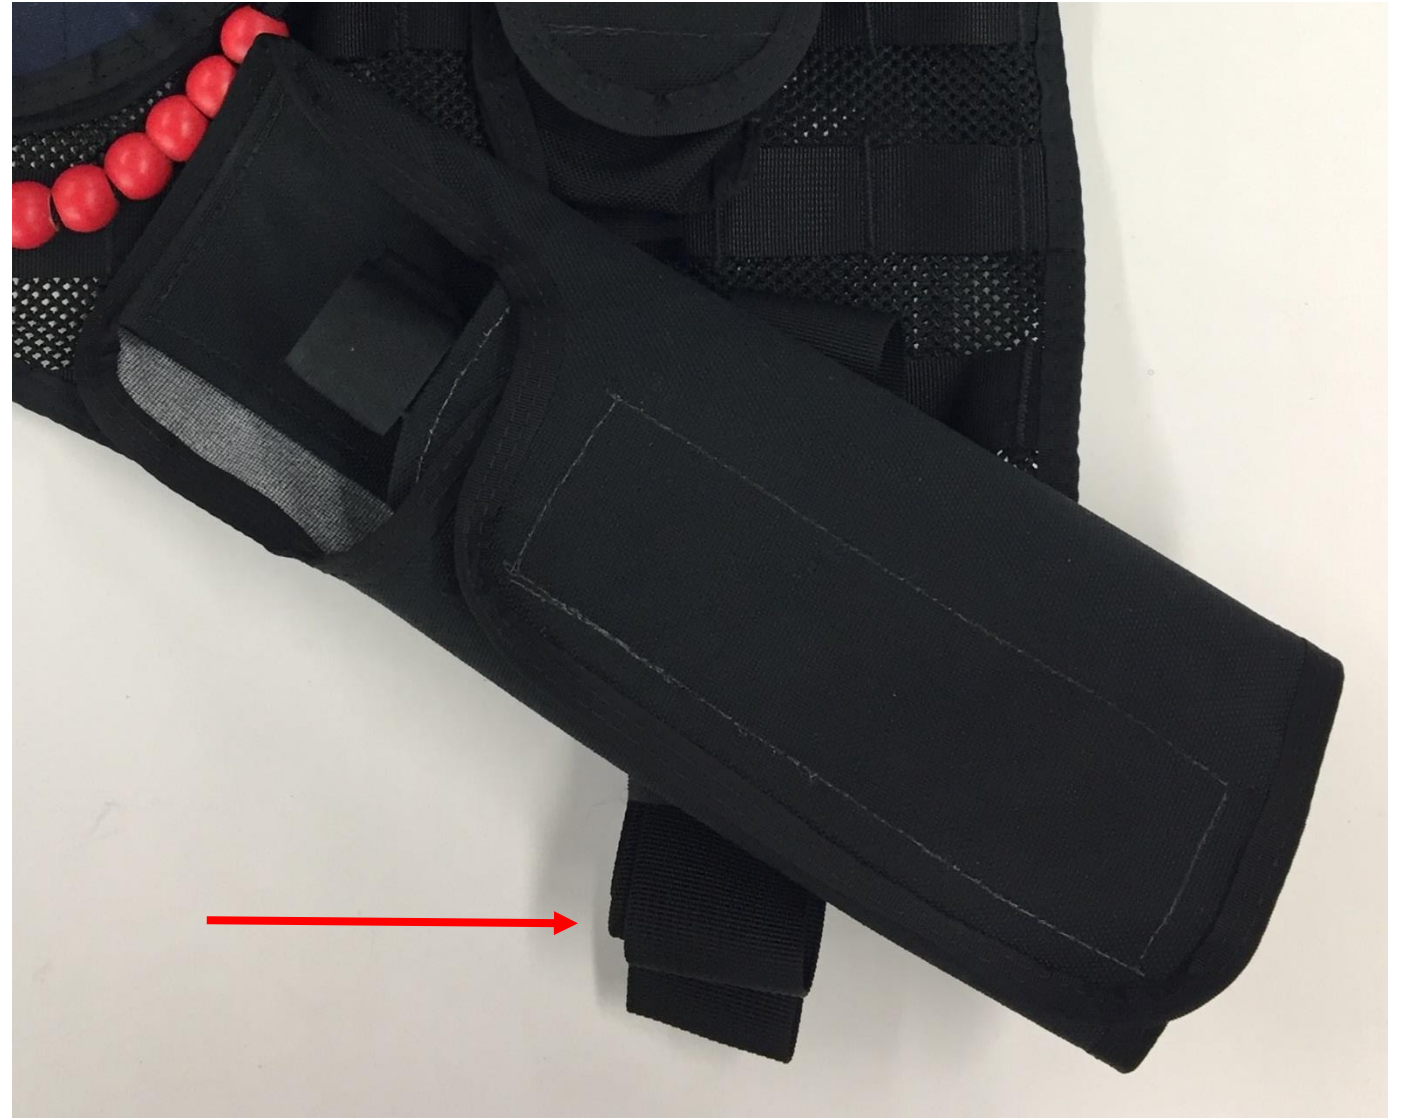



QUALITY ~ PERFORMANCE ~ INNOVATION

The Cell Phone/PLB pocket can be installed on any of the remaining MOLLE loops above the LV2 Holster. Be sure not to place the pocket in an area where it could interfere with LV2 operation.

